



Industrial Weighing Systems

9 Richmond St. Picton, ON Canada K0K 2T0

Ph: 613-786-0016 Cell: 613-921-0397 Fax: 613-476-5293

E-mail info@iwsystems.ca Website: www.iwsystems.ca

Model 708 is not Nema-4 rated and should not be directly sprayed or used in a wet area.



Ensure the platter is empty and clean and the unit has been powered for at least 10 minutes prior to calibration.

Power up the instrument and note the default display units when powered.

Power off the display, remove the 2 right side panel screws to access the inside of the instrument. At the edge of the circuit board (near bottom) there is either a push button or switch.

Push button: While holding in on the push button power up the indicator
The display should show **int.**
Release the button.

Switch: Move the switch to the opposite position then power up the instrument.
The display should show **int.**
Return the switch to its original position

Continue to press the **ENTER** key until the **LoAd** = is displayed

Place your calibration weight on the scale (50% capacity minimum recommended)

Use the numeric keypad to set the display indication to the test weight value then press the **ENTER** key

*** The calibration value should match the default units noted when powering up the indicator. ***

The display will dash and then show **UnLd,**

Remove the calibration weight from the scale, wait a few seconds then press the **ENTER** key.

Continue to press the **ENTER** key several times and eventually the instrument will exit and display weight.

Test the scale with several weights to ensure calibration was successful