



Industrial Weighing Systems

9 Richmond St. Picton, ON Canada K0K 2T0

Ph: 613-786-0016 Cell: 613-921-0397 Fax: 613-476-5293

E-mail info@iwsystems.ca Website: www.iwsystems.ca

GSE Indicators

Calibration Procedure for **GSE-350** calibration weight Scale

Press **Zero** and **Select** simultaneously

Press **Zero, Print, Units** and **Tare** one after the other scale should say first zero.

Press **Tare** with nothing on the scale

(Use **Print** and **Units** keys to enter the load calibration weight then press **Tare**)

Add calibration weight press **Tare**

Keep pressing **Tare** until out

Calibration Procedure for **GSE 450 460** calibration weight Scale

- 1: Press [Zero]+[Select] Simultaneously
- 2: Press [Zero] [PRINT] [UNITS] [ENTER] In that order
- 3: Remove any extraneous Load
- 4: Press [Select] until "New Zero" is displayed
- 5: Press [Enter]
- 6: Place calibration weight on scale
- 7: Key in the calibration weight value
- 8: Press [Enter] "Cal OK"
- 9: Press [Enter] 3 times

Calibration Procedure for **GSE 455 465 550**

- 1) From the calibration weight screen key in 100 [Select]
Displays Key in Code: The code must be keyed in within 5 seconds
- 2) Press 54321 [ID] [Enter]
- 3) Prompt with quick cal, empty scale and Press [Enter]
- 4) Apply cal calibration weight, Key in calibration weight and Press [Enter]
- 5) Cal OK Press [Enter], Save press [Enter], Exit press [Enter]

Procedure for **GSE 625 622** calibration weight Scale, GSE 625 or 622 Counting Scale

Use the **scale select** key to choose the scale you wish to calibrate

Press the [GSE] [MODE] to put the instrument into offset display mode

Press the [GSE] [ZERO]. The scale is now in the auto cal mode

Before going any further enter the program jumper bypass code [23640][GSE][.]

The lower display will prompt you through the set up of Auto Cal.

First of all remove all calibration weight and press [Zero].

The scale will average the zero while it counts to 10 in the lower display.

Counter will reset when motion is sensed

When the count reaches 10 place cal weights on scale, key in amount and press [ENTER]

When the procedure is complete press [MODE] to return to offset displayed

If you want to cal another scale use scale select and start all over

Or

Press [ZERO] to re-enter the Weigh Mode